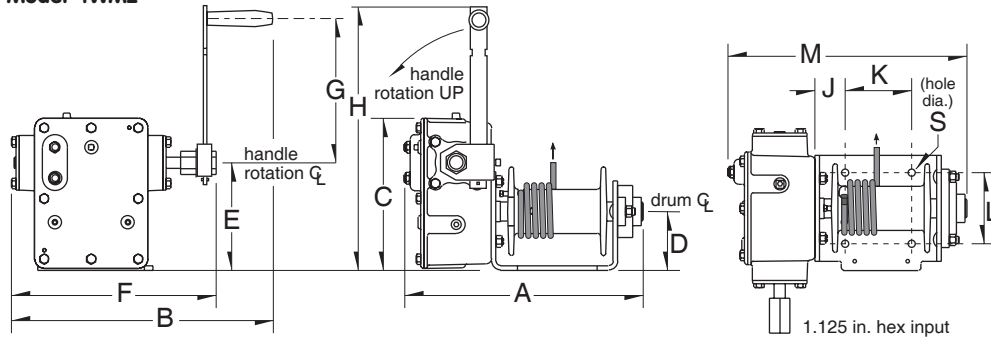
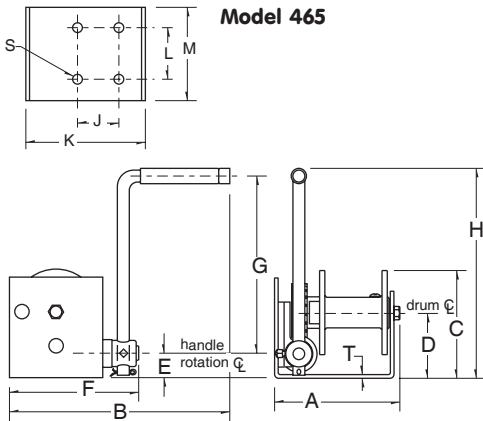
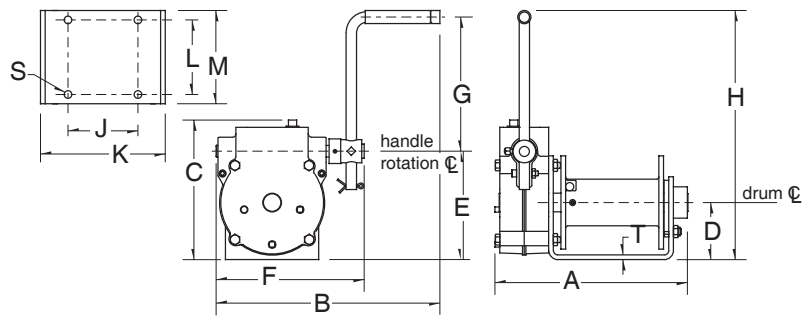
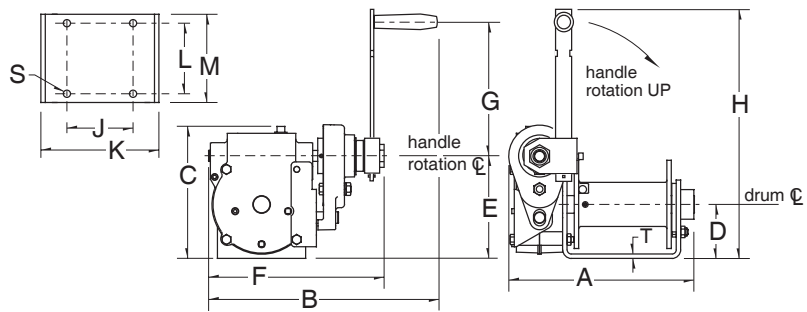
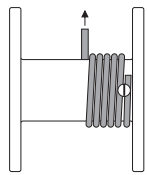
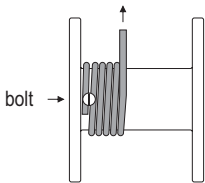
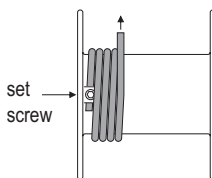


Model 4WM2


Install wire rope correctly as shown, or brake will not operate properly.

Model 465

Models 462, 472 and 482

Models 4622PB and 482B

Wire Rope Installation Model 465

Wire Rope Installation Models 462 and 4622PB

Wire Rope Installation Models 472, 482 and 482B

Worm Gear Hand Winches – Dimensions (in)

	465	462	4622PB	472	482	482B	4WM2
drum dia.	1.50	1.50	1.50	2.50	4.00	4.00	2.50
flange dia.	4.00	4.06	4.06	5.00	8.50	8.50	5.00
drum width	2.81	2.81	2.81	5.00	6.50	6.50	5.00
A	6.50	7.75	7.50	10.12	13.97	13.97	13.50
B	10.50	10.25	11.81	12.00	18.88	20.94	15.56
C	5.44	5.63	5.62	7.12	12.80	12.80	8.56
D	3.40	2.38	2.40	3.06	5.75	5.75	3.31
E	1.40	4.38	4.38	5.81	10.38	10.38	6.04
F	6.38	5.88	7.60	7.94	12.50	15.47	11.56
G	8.75	9.00	10.59	7.25	12.25	18.38	10.59
H	10.59	13.38	15.59	13.38	22.62	29.19	17.30
J	2.00	2.00	2.00	3.75	7.00	7.00	1.75
K	5.75	4.44	4.44	6.69	9.00	9.00	3.75
L	2.50	2.50	2.50	4.00	6.00	6.00	4.00
M	4.50	3.50	3.50	5.00	8.00	8.00	13.50
S (hole dia.)	.40	.40	.40	.40	.56	.56	.41
T	.19	.19	.19	.25	.50	.50	—

Dimensions are for reference only and subject to change without notice.

Important:

It is the owner's or operator's responsibility to determine the suitability of the equipment to its intended use. Study all applicable codes, manuals, and regulations. Be sure to read the Owner's Manual supplied with the equipment before operating it.